









USING SETTINGS

> Quick Settings

A few frequently used settings are easily accessible through the Quick Settings menu, such as:

- Channel Blocking
- Second Audio Programming (SAP) Language
- Parental Control
- Sleep Timer

At any time while watching TV, you can access these features by pressing the Settings button  on your remote control.











- > Press the **Up**  or **Down**  arrow buttons to highlight a setting.
- > Press the **Left**  or **Right**  arrow buttons to select and set the desired options.
- > Press the **Select** button  to save settings and exit.



> General Settings

A wide range of features can be adjusted via the “General Settings” menu, including audio settings, parental controls, display options, Pay Per View settings, and favorite channel listings.

To access the General Settings menu:

1. Press the **Settings** button  on your remote twice.
2. At the General Settings menu, press the **Up**  or **Down**  arrow buttons to scroll through the list of preferences in the left column. Use the **Select** button  to enter the menu of the setting you would like to view or change.
3. Press the **Up** , **Down** , **Left**  or **Right**  arrow button to select and set the desired options.
4. When the setting information is correct, press **A** .
5. Press the **Exit** button  to return to watching TV.


General Settings (Continued)

Audio

Use the audio settings to set up your volume preferences.

Audio: Range

Use this feature to set the dynamic range of the Dolby Digital volume. The “Wide” setting mimics a movie theatre or CD, using the entire dynamic range. The “Narrow” setting is ideal for programming that contains mostly dialogue.

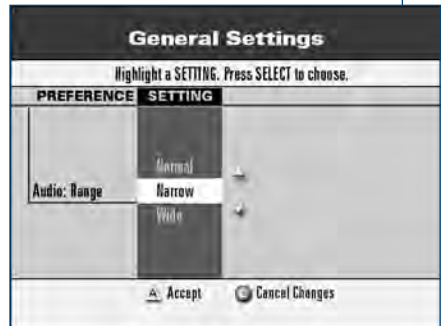


Audio: Volume Control

Use this feature to set the volume control to one of the following options:

- > “Fixed” provides maximum audio output. This setting is recommended if you control the volume using a stereo receiver.
- > “Variable” is recommended for all other means of volume control.

Audio: Digital Audio Output Select

 Use this feature to set the format of the digital audio output to either “Dolby Digital”, “HDMI” or “Other” output.

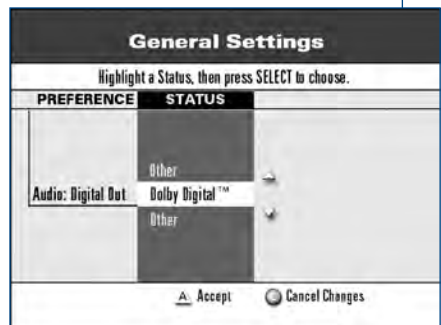

Block

Use the block settings to set up your Parental Control preferences. For complete details and instructions, please refer to pages 71 – 77.

Display

Control what is displayed on the front panel of the STB when it is powered on and powered off.


Language

Use the language settings to select languages for second audio programming (SAP) for digital channels and text for screen displays. The default language is English.

Language: Audio


Use this feature to select your preferred SAP language to use with digital channels that support more than one language.

Note: Use Quick Settings to enable SAP for analog channels and to choose an audio language for the digital channel that is currently tuned.

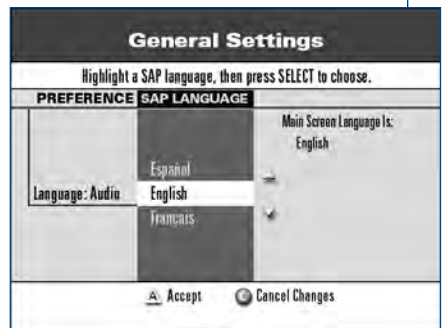

Language: Screen

Use this feature to select the language you would like displayed on all screen information, menus and in the IPG.

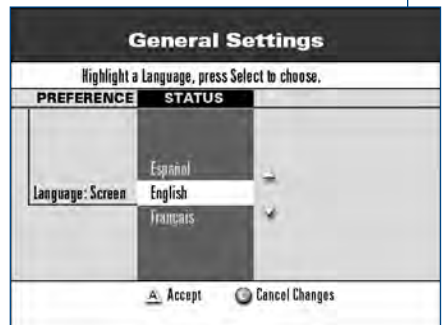

General Settings (Continued)

Pay Per View (PPV)

Use the PPV settings to change your PPV PIN and view PPV purchase information. For complete details and instructions, please refer to pages 62 – 65.

Set

Control basic operations of your STB such as selecting the output channel that your TV uses to receive video programming (Set: Output Channel).

Timer


Turn your STB automatically on or off at specified times.

 
Viewer

Use the viewer settings to select your favorite channels for quick viewing.


Viewer: Favorites

Use this feature to select the channels that you view most often.

- > To create your favorite channels list, refer to the detailed instructions on pages 78 – 79.
- > To view and tune to your favorite channels while watching TV, press the **FAV** button  on your remote.

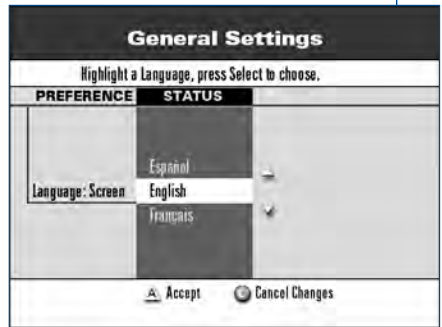

Help with General Settings

At any point within the General Settings menus, you can press the **INFO** button  on your remote to display details about using the various features.